


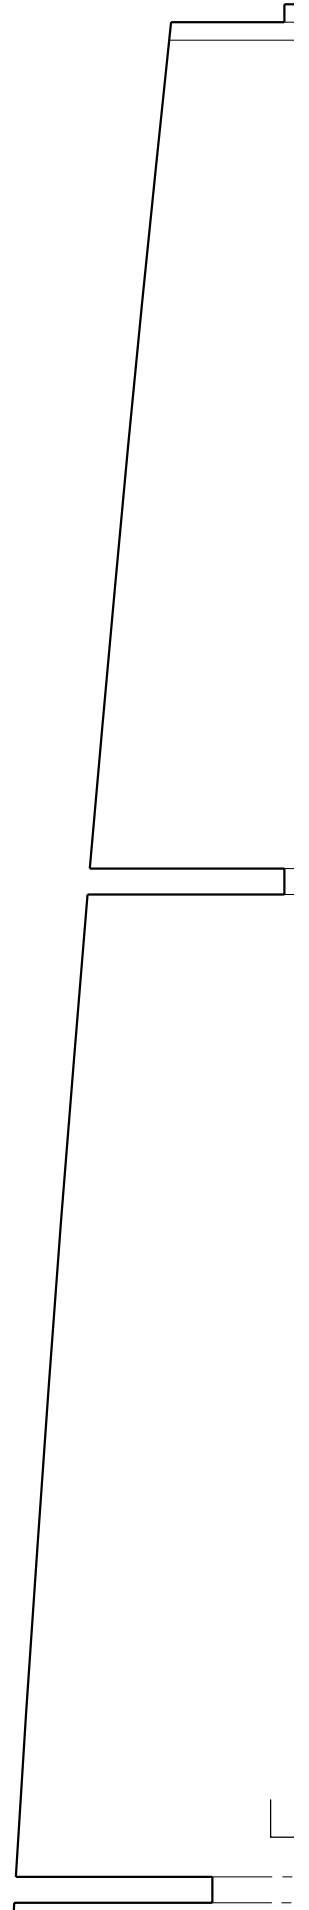


A 2 REQ'D

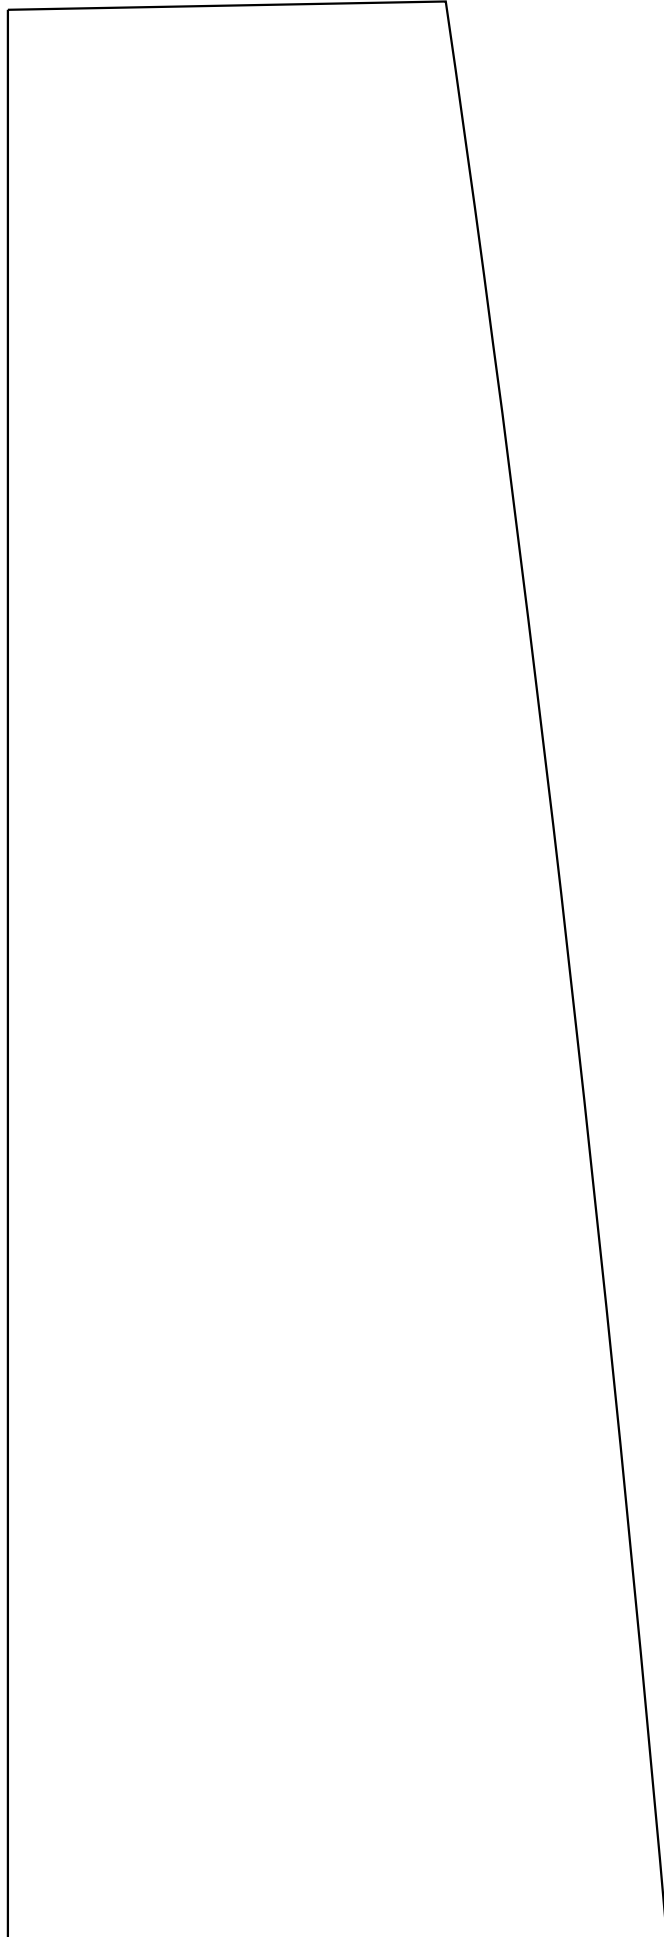

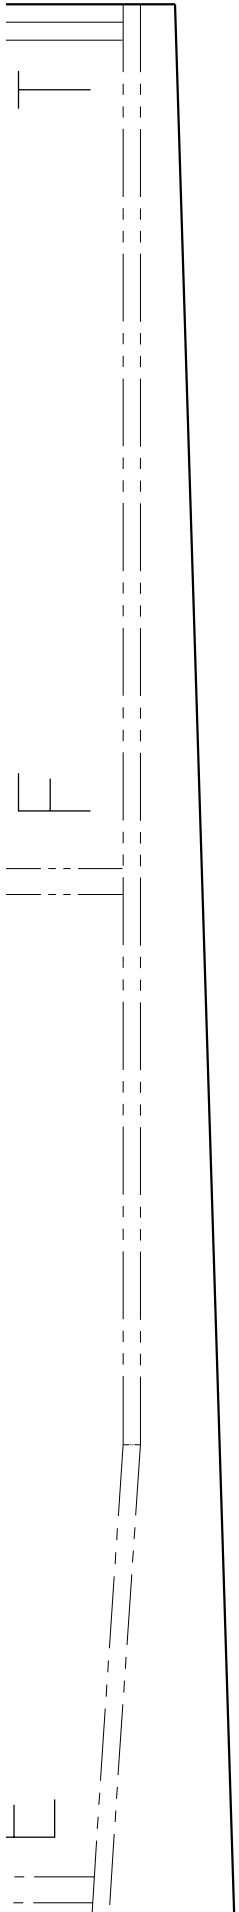


1/8th SCALE
ATLAS VAN LINE

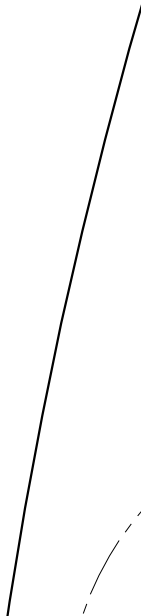

PARTS TEMPLATE
06/06/05 by:
GARRY FINLAY

SPONSON
DOUBLER
1/16" PLY

BULKHEAD-A
1/8 Balsa
2 REQ'D

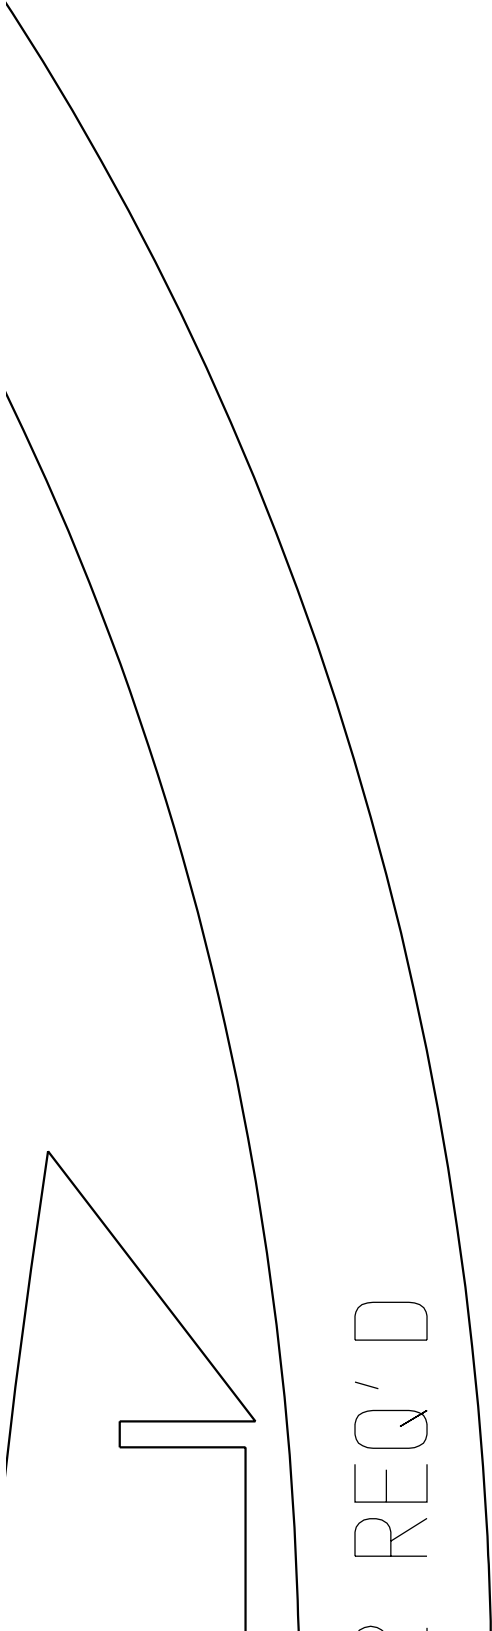

SONSON BASE SHEAR

1/8 BALS

16" PLY

10' D

PER 1/8 Balsa

2 REQ'D

D

REAR NON-TRIP
1/16" PLY
2 REQ'D

RIII KHFIAN - D

BULKHEAD

1/8 Balsa

BULKHEAD - E

1/8 Balsa


BULKHEAD - F

1/8 Balsa



TRANSOM

1/16" PLY

SPONSON SHEAR 1/8 Balsa

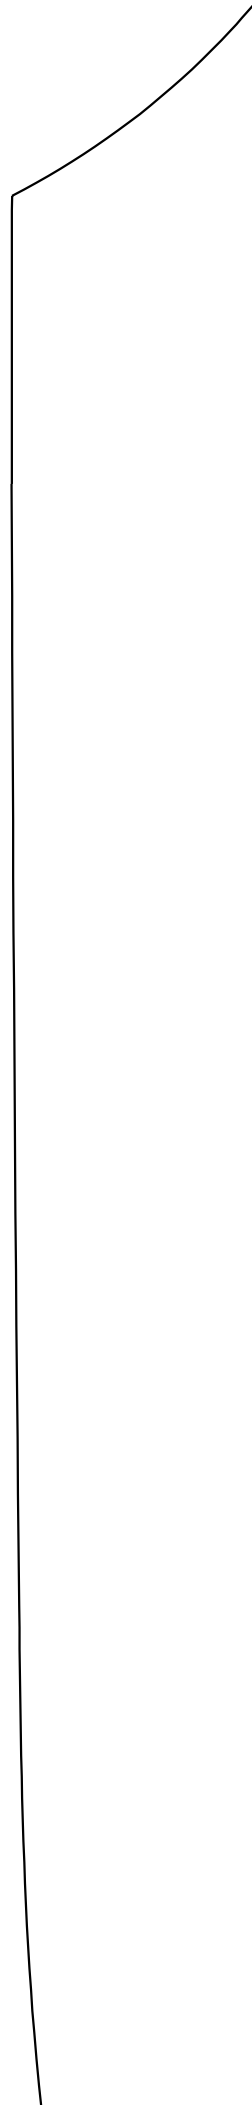

DECK 1 /
2 RE

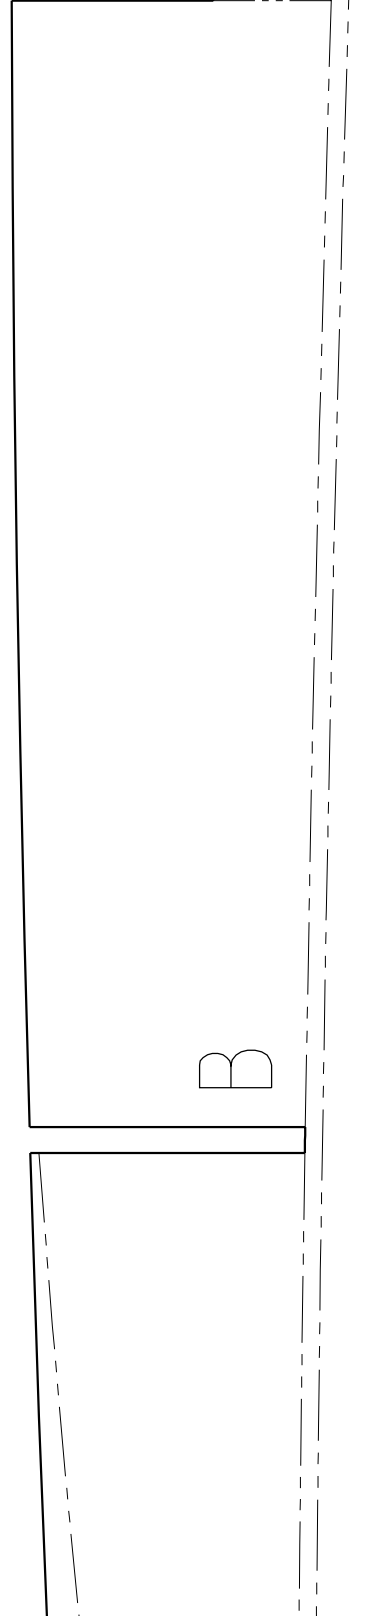


SPONSON BOTTOM
1/16" PLY
2 REQ'D

SPONSON SIDE
1/16" PLY

1/10
2 REQ'D


3 1/8 Balsa


AD - C
-SA

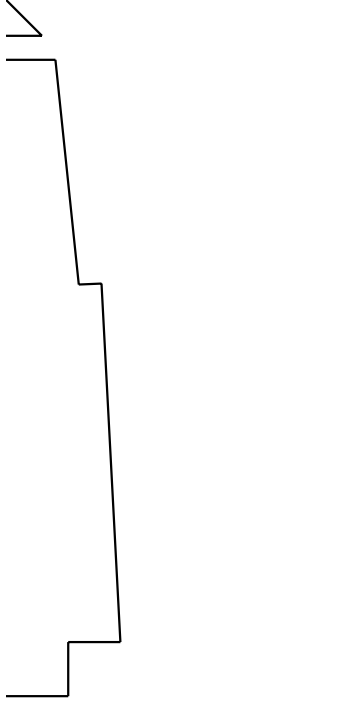

DOUBLER
PLY

TEMP FORMER; 1/4" PLY

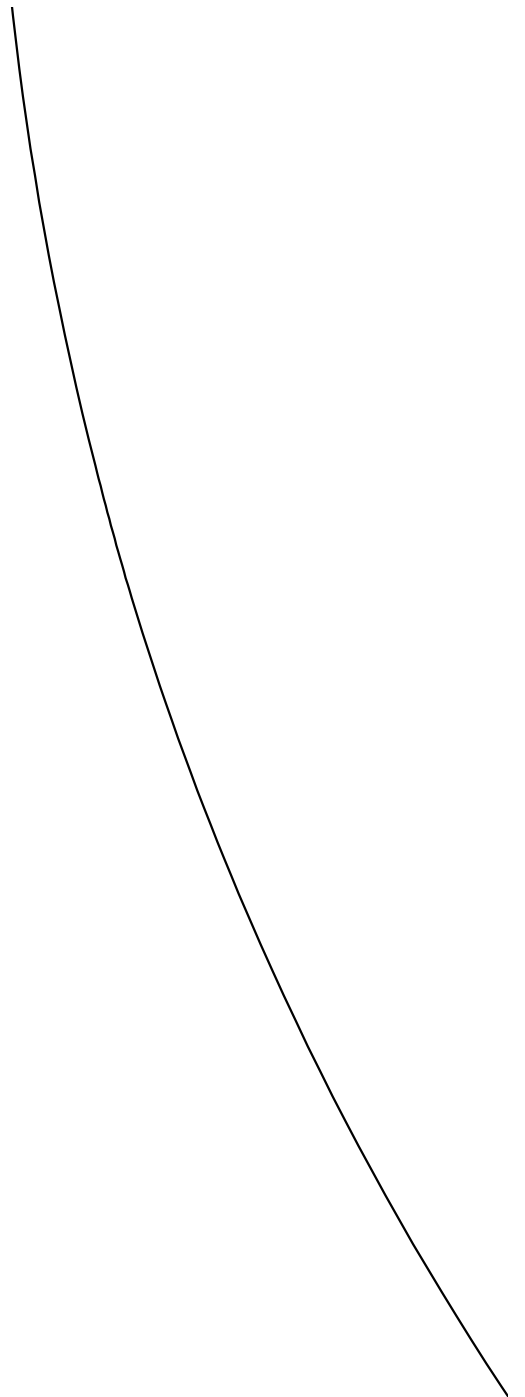

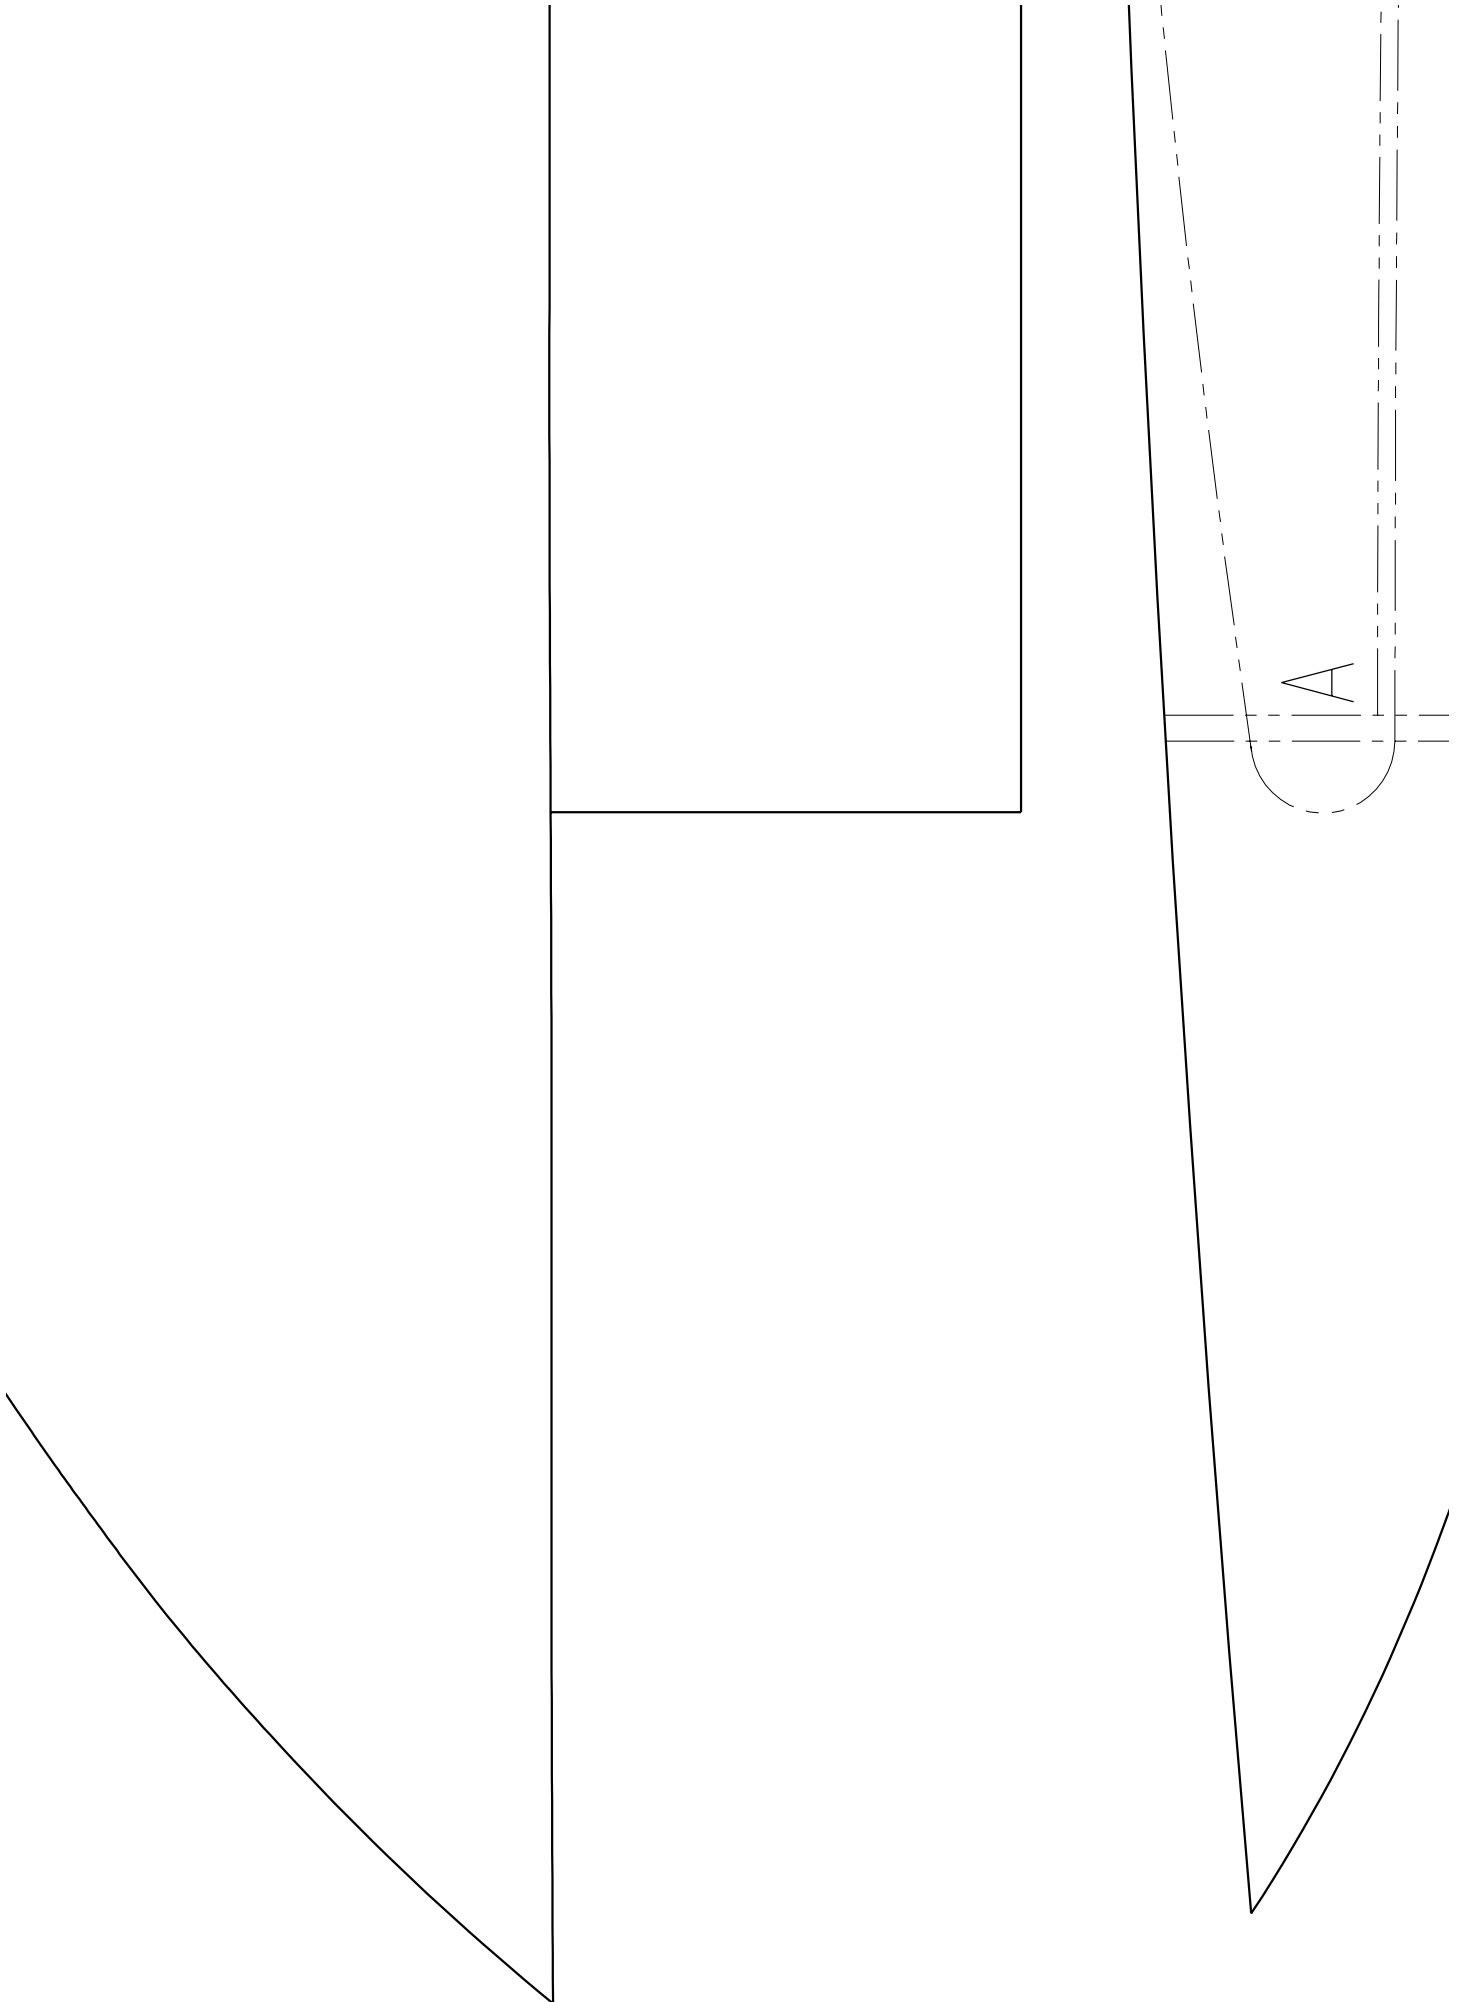

==

BULKHEAD - E

BULKHEAD
1/8 BAI

